

INNOVA JUNIOR COLLEGE
JC2 PRELIMINARY EXAMINATION
 in preparation for General Certificate of Education Advanced Level
Higher 2

CANDIDATE
NAME

CLASS

INDEX NUMBER

CHEMISTRY

9729/04

Paper 4 Practical

14 Aug 2018

Candidates answer on the Question Paper.

2 hours 30 minutes

READ THESE INSTRUCTIONS FIRST

Write your index number, name and class on all the work you hand in.
 Give details of the practical shift and laboratory when appropriate, in the boxes provided.

Write in dark blue or black pen.

You may use an HB pencil for any diagrams or graphs.

Do not use staples, paper clips, glue or correction fluid.

Answer **all** questions in the spaces provided on the Question Paper.

The use of an approved scientific calculator is expected, where appropriate.

You may lose marks if you do not show your working or if you do not use appropriate units.

Qualitative Analysis Notes are printed on pages 18 and 19.

An **insert** is printed on **page 21**.

At the end of the examination, fasten all your work securely together.

The number of marks is given in the brackets [] at the end of each question or part question.

Shift
Laboratory

For Examiner's Use	
1	7
2	21
3	27
Total	55


This document consists of **20** printed pages and **2** blank pages.



Innova Junior College

[Turn over

- 1 You will find the relative atomic mass, A_r , of magnesium by measuring the volume of hydrogen produced when a known mass of metal reacts with an excess of acid.




FA 1 is 2.00 mol dm⁻³ hydrochloric acid, HCl.

FA 2 is magnesium, Mg.

(a) Method

Read through the whole method before starting any practical work.

- Fill the tub with water to a depth of about 5 cm.
- Weigh the magnesium, **FA 2** and note its mass below.
- Fill the 100 cm³ measuring cylinder to about 30 cm³ mark with hydrochloric acid, **FA 1**.
- Gently, with minimal disturbance to the surface of the solution, top up the measuring cylinder containing **FA 1** with distilled water to about 4 to 5 cm above the 100-cm³ mark.
- Bend the **FA 2** strip into a U-shape.
- Carefully place the **FA 2** strip about half a centimeter into the measuring cylinder so that it is above the liquid and friction holds it in position.
- Hold a piece of paper towel over the open end of the measuring cylinder, invert the measuring cylinder and immediately place it in the tub of water. Remove the paper towel and clamp the measuring cylinder as shown in the diagram.

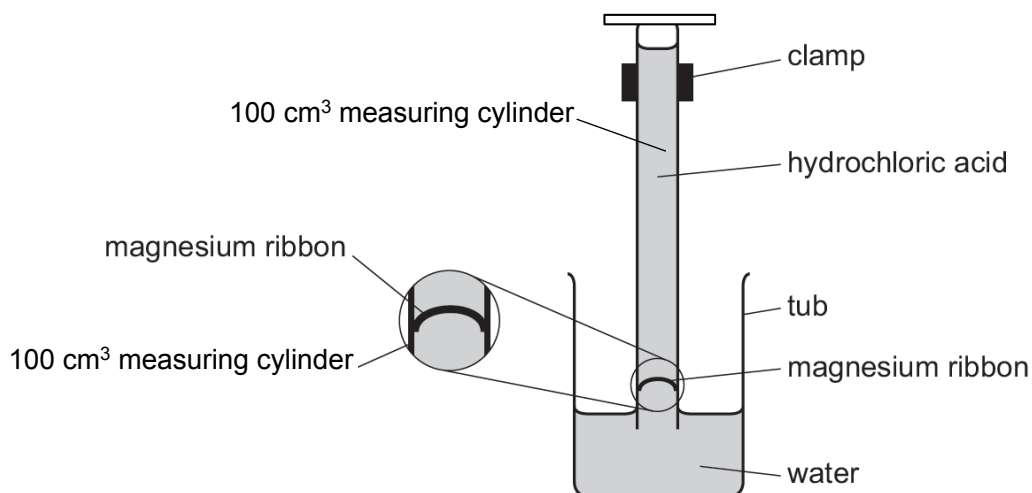

- The liquid level should now be on the scale of the measuring cylinder. If it is not, repeat the above procedure to set up your experiment again.
- Record the initial reading on the measuring cylinder. Remember that the scale is now upside down.
- Leave the apparatus so that the acid from the measuring cylinder diffuses around the **FA 2** and reacts.
- You should start **Question 2** or **Question 3** while waiting for the reaction to complete.
- When all the **FA 2** has reacted, note and record the final reading on the measuring cylinder.
- Calculate the volume of hydrogen produced.

Results

M1	
M2	

[2]

(b) Calculations

Show your working and appropriate significant figures in the final answer to **each** step of your calculations.

- (i)** Calculate the number of moles of hydrogen produced.
 (Assume that 1 mole of gas occupies 24.0 dm³ under these conditions.)
 (If you are unable to calculate the volume of hydrogen produced in **(a)**, you may assume that the volume of hydrogen produced is 70 cm³ for the calculation here. Note: this is a hypothetical value.)

Amount of H₂ = [1]

M3	
----	--

- (ii)** Use your answer to **(i)** and the mass of magnesium used to calculate the *A_r* of magnesium.

A_r of Mg = [1]

M4	
----	--

- (c)** What would be the effect on the value of the *A_r* of magnesium calculated if the temperature of the room was much lower than that for your experiment? Explain your answer.

.....

.....

..... [2]

M5	
M6	

- (d)** A similar experiment was repeated using aluminium instead. The reaction was much slower. Explain why aluminium took a longer time to react completely.


.....

..... [1]

M7	
----	--

[Total: 7]

- 2 Sodium thiosulfate reacts with acid to produce a pale yellow precipitate of sulfur.



You will investigate how the rate of this reaction varies with the concentration of thiosulfate ions.

To do this, you will measure the time taken for a fixed amount of sulfur to be formed.

FA 3 is 0.10 mol dm⁻³ sodium thiosulfate, Na₂S₂O₃.

FA 4 is 1.00 mol dm⁻³ hydrochloric acid, HCl.

(a) Experiment 1

- Use the larger measuring cylinder to transfer 40 cm³ of **FA 3** into the 100 cm³ conical flask.
- Use the smaller measuring cylinder to measure 25 cm³ of **FA 4**.
- Pour the **FA 4** into the **FA 3** in the conical flask and start timing **immediately**.
- Stir the mixture in the conical flask once and place the conical flask on top of the printed insert (page **21**) provided.
- Look down through the solution in the conical flask at the print on the insert.
- Stop timing as soon as the precipitate of sulfur makes the print on the insert **just** invisible.
- Record the reaction time to the nearest second.
- Empty, rinse and dry the conical flask so it is ready for use in **Experiment 2**.
- Rinse the sink with tap water to wash away the products of the reaction.

Experiment 2

- Use the larger measuring cylinder to transfer 30 cm³ of **FA 3** into the 100 cm³ conical flask.
- Use the same measuring cylinder to add 10 cm³ of distilled water to the conical flask.
- Use the smaller measuring cylinder to add 25 cm³ of **FA 4** to the mixture in the beaker and start timing **immediately**.
- Stir the mixture in the conical flask once and place the conical flask on top of the printed insert provided.
- Look down through the solution in the conical flask at the print on the insert.
- Stop timing as soon as the precipitate of sulfur makes the print on the insert **just** invisible.
- Record the reaction time to the nearest second.
- Empty, rinse and dry the conical flask so it is ready for use in **Experiment 3**.
- Rinse the sink with tap water to wash away the products of the reaction.

Experiment 3

Repeat **Experiment 2** using 20 cm³ of **FA 3**, 20 cm³ of distilled water and 25 cm³ of **FA 4**.

Experiments 4 and 5

Choose suitable volumes that will enable you to investigate further the effect of changing the concentration of thiosulfate ions on the rate of the reaction. You should not use a volume of less than 10 cm³ of **FA 3**.

Results

The relative rate of the reaction can be calculated as shown.

$$\text{rate} = \frac{1000}{\text{reaction time}}$$

In an appropriate format in the space provided, record:


- all measurements of volumes used,
- the reaction time, to the nearest second,
- the relative rate of the reaction, to 3 significant figures, for each of the five experiments

M8	
M9	
M10	
M11	
M12	

[5]

[Turn over

- (b) On the grid, plot a graph of rate of reaction (y-axis) against volume of **FA 3** (x-axis).
Circle any points that you consider anomalous and draw a line of best fit to show how the rate of the reaction depends on the volume of **FA 3**. [3]

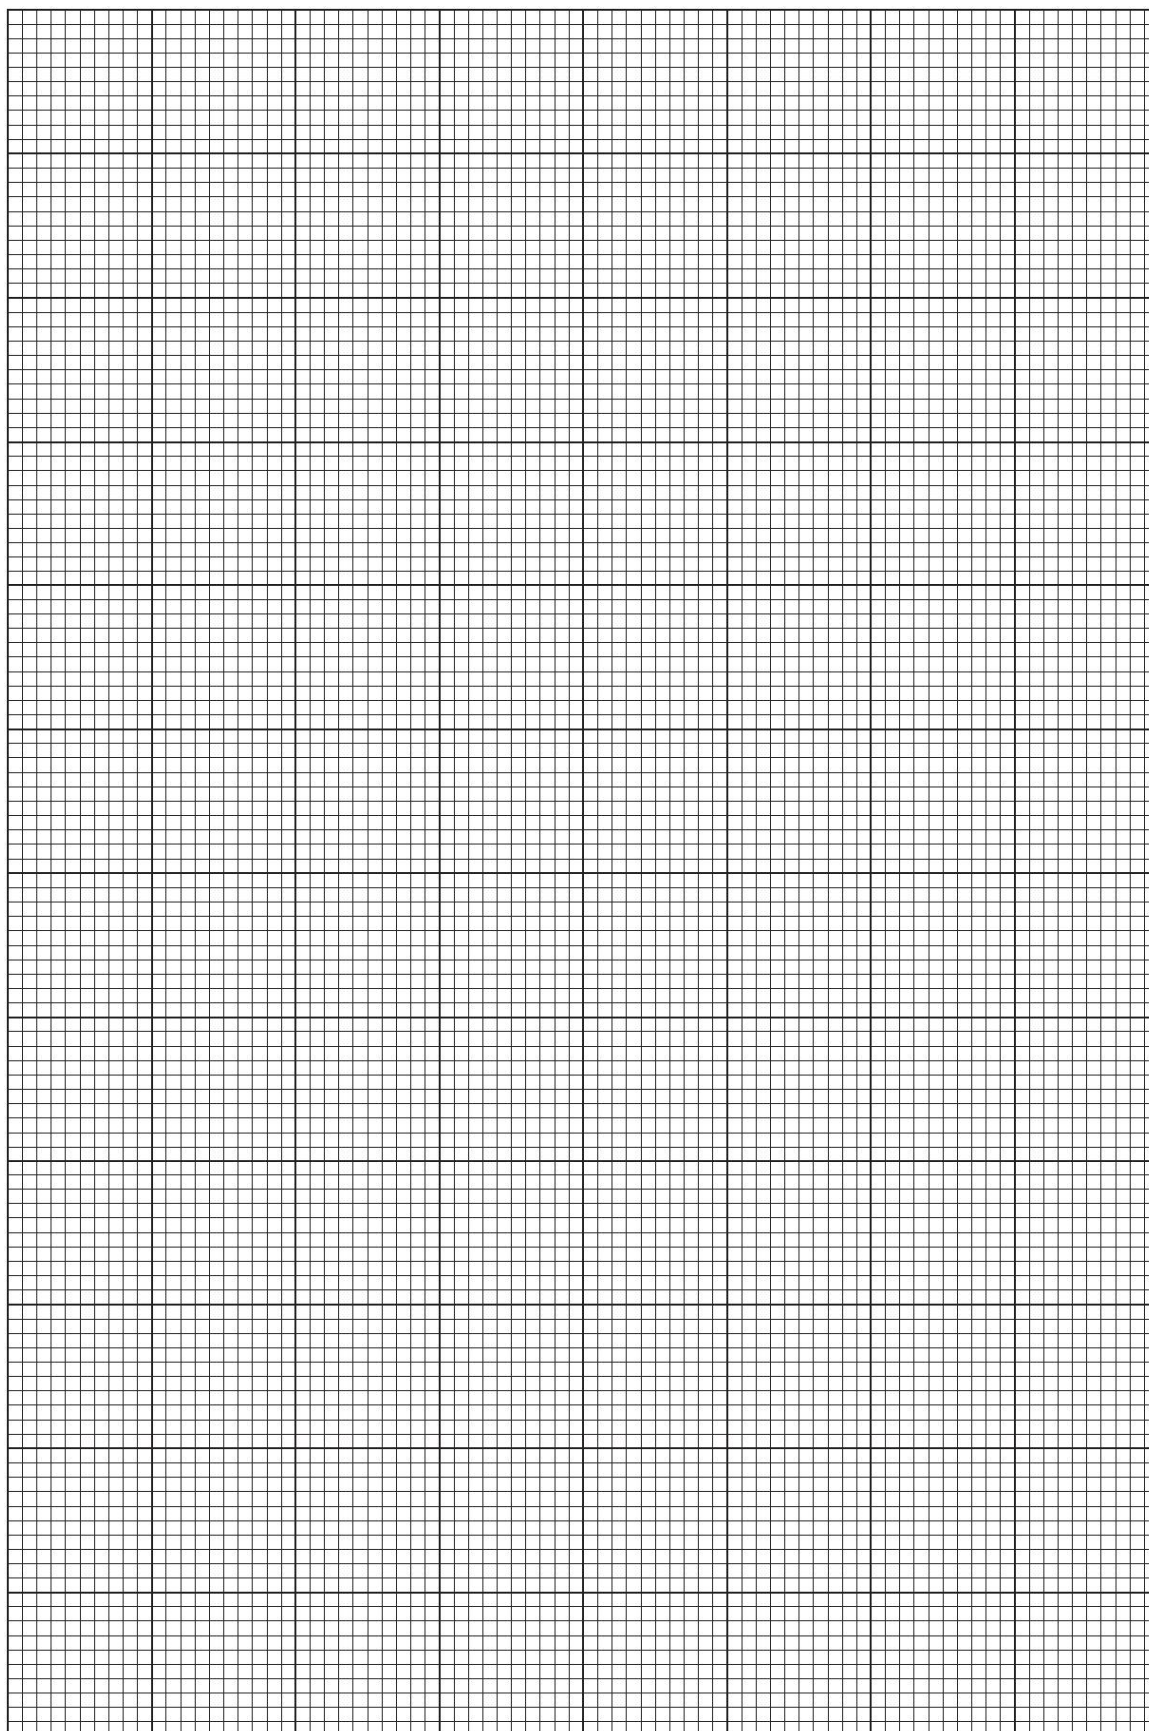

M13	
M14	
M15	

- (c) Use **your graph** to calculate the time that the reaction would have taken if 8 cm^3 of **FA 3** had been used. Show **on the grid** how you obtained your answer.

time = [1]

M16	
-----	--

- (d) It has been claimed that the reaction is non-zero order with respect to $[\text{S}_2\text{O}_3^{2-}]$.

State whether you agree or disagree with this claim. Use evidence from your graph to support your answer.

.....

 [2]

M17	
-----	--

M18	
-----	--

- (e) A student broke the 100 cm^3 conical flask when carrying out the experiment and decided to use a petri dish instead. This has a different shape.



Conical Flask



Petri Dish

State and explain what effect this would have on the student's result.

.....

 [2]

M19	
-----	--

M20	
-----	--

- (f) A student suggested that the temperature at which the experiment was carried out would also affect the rate of the reaction.

Plan an investigation, based on the experiment described in **2(a)**, to determine the effect of temperature on the rate of reaction.

You may assume that you are provided with

- 0.10 mol dm⁻³ sodium thiosulfate, Na₂S₂O₃.
- 1.00 mol dm⁻³ hydrochloric acid, HCl
- the equipment normally found in a school or college laboratory

Give a step-by step description of how you would carry out the experiment by considering

- what you would keep constant in all the experiments,
- an suitable number of experiments you would do, and a reasonable temperature range(minimum and maximum temperatures),
- the apparatus that you would use in addition to that specified in **2(a)**,
- the procedure that you would follow and the measurements that you would take.

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

(g) State a hazard that must be considered when planning the experiment and describe precautions that should be taken to keep risks to a minimum.

..... [1]

M26	
M27	
M28	

3 Qualitative Analysis

At each stage of any test, you are to record details of the following.

- colour changes seen
- the formation of any precipitate
- the solubility of such precipitates in an excess of the reagent added.

Where gases are released, they should be identified by a test, **described in the appropriate place in your observations.**

You should indicate clearly at what stage in a test a change occurs.

Marks are **not** given for chemical equations.

No additional tests for ions present should be attempted.

If any solution is warmed, a boiling tube MUST be used.

Rinse and reuse test-tubes and boiling tubes where possible.

Where reagents are selected for use in a test, the name or correct formula of the element or compound must be given.

Question 3 consists of two tasks.

In the first task, you are to explore the chemistry of some compounds of an unknown transition element **W** and determine its identities.

FA 5 is a solid sample of a common dioxide of the unknown transition element **W**,

FA 6 is dilute sulfuric acid, H_2SO_4 ,

FA 7 is a solid sample of sodium ethanedioate, $\text{Na}_2\text{C}_2\text{O}_4$,

FA 8 is a solution of pure compound **X**, which is the product formed in **(a)(i)**.

(a) (i)	Test	Observations
	Transfer all of the solid sample of FA 7 into a small conical flask. Add 25 cm^3 of FA 6 to this flask. Gently heat the flask until the temperature of the mixture reaches about $60\text{ }^\circ\text{C}$. Swirl the mixture carefully. Place the flask on the heat proof mat. Using a spatula, add FA 5 to the mixture in small portions. Between each addition, stir the mixture carefully with the thermometer and observe any changes in the temperature of the mixture. Stop adding FA 5 to the mixture when you think the reaction is complete.	

Filter the mixture into a boiling tube and leave the filtrate to stand. The filtrate is compound X .		
Retain this filtrate for use in (a)(ii) .		
While you are waiting for (a)(i) to be complete, continue with (c). The colour of the filtrate may change on standing.		M29
		M30
		M31

[3]

- (a) (ii)** In this part, you are to investigate the effect of the addition of aqueous sodium hydroxide, to separate portions of the filtrate from **(a)(i)** and **FA 8**.

In the space below, prepare a suitable table and in it record details of the tests performed and the observations made.

M32	
M33	
M34	

[3]

- (b) (i)** Give **two** conclusions you can draw about the nature of the reaction occurring in **(a)(i)**.

In each case, support your conclusion by referring to your observations.

Conclusion **1**.....

Evidence.....

.....

.....

Conclusion **2**.....

Evidence.....

.....

.....

[2]

M35	
M36	

- (ii) Explain why you decided to stop the addition of **FA 5** at the point you chose in **(a)(i)**.

You should support your answer by referring to your observations.

.....

 [1]

M37	
-----	--

- (iii) Consider your observations in **(a)(ii)**.

Identify the transition metal ion formed in **(a)(i)** and suggest an explanation for the differences between your observations when you added aqueous sodium hydroxide to the filtrate from **(a)(i)**, and to **FA 8**.

Ion present is

Explanation for difference

.....
 [1]

M38	
-----	--

- (iv) In **(a)(i)**, the reaction between **FA 5** and **FA 7** occurs under acidic conditions.

Write an ionic equation for this reaction. Use the letter '**W**' to represent the transition metal in this equation.

..... [1]

M39	
-----	--

In the second task, you are to perform a series of test to deduce the structure of the unknown hydrocarbon, **FA 9**.

FA 9 is a simple hydrocarbon compound,
FA 10 is bromine water.

(c) (i)	Test	observations
	Place 5 cm ³ of aqueous sodium hydroxide in a test-tube. Add 1 drop of FA 9 to this test-tube. Add aqueous potassium manganate(VII), dropwise with shaking, until no further change is seen. Do not exceed 15 drops.	
	Note: Eventually, this reaction will produce a brown MnO ₂ precipitate. There is no need for you to wait for this to happen.	
(ii)	Place 5 cm ³ of dilute sulfuric acid in a test-tube. Add 1 drop of FA 9 to this test-tube. Add aqueous potassium manganate(VII), dropwise with shaking, until no further change is seen. Do not exceed 15 drops.	
(iii)	Place 5 cm ³ of water in a test-tube. Add 1 drop of FA 9 to this test-tube. Add FA 10 , dropwise with shaking, until no further change is seen.	

M40	
M41	
M42	

[3]

Conclusions

- (d) Consider the identities of the Mn-containing reactant and eventual product in (c)(i).

Suggest a value for the oxidation number of Mn in the coloured ion produced in (c)(i). Explain your reasoning.

Oxidation number of Mn.....

Explanation.....

.....

..... [1]

M43	
------------	--

- (e) Compound **Y** is the main organic product in (c)(i), when **FA 9** reacts with KMnO_4 under alkaline conditions. The molecular formula of **Y** is $\text{C}_6\text{H}_{12}\text{O}_2$.

- (i) Deduce the molecular formula of **FA 9**.

Explain your deduction. Your explanation must be supported by evidence from your observations in (c).

Molecular formula of **FA 9** is

Explanation.....

.....

.....

.....

..... [2]

M44	
M45	

- (ii) Draw the structural formulae for **FA 9** and compound **Y**.

Explain how you deduced the structure of **FA 9**.

Structure of FA 9	Structure of Y

Explanation.....

.....

.....

.....

..... [2]

M46	
M47	


(f) **Planning**

Many transition metal complex ions are coloured. It is possible to use this property to determine the concentration of a solution of a coloured complex ion. A few cm^3 of the solution is placed inside a machine, known as a spectrometer. This machine measures the amount of light that is absorbed when a specific wavelength of visible light is shone through a coloured solution. It does this by comparing the amount of light passing through the sample with the amount of light passing through the pure solvent. The amount of light absorbed is expressed as an *absorbance value*. The more concentrated the solution, the higher the absorbance value, i.e., the absorbance value is directly proportional to the concentration of the solution.

This technique can be used to determine the concentration of a solution of aqueous WO_4^- . A series of known, but different, concentration of solution containing WO_4^- is prepared. A spectrometer is used to measure the absorbance of each solution. A graph of absorbance against concentration is then plotted. This graph is known as a calibration line.

The experiment is then repeated using a solution of unknown concentration. By comparing the absorbance of this solution with the calibration line, the concentration of WO_4^- in the unknown solution can be determined.

- (i) Sketch the calibration line for the graph of absorbance against concentration that you would expect to obtain.

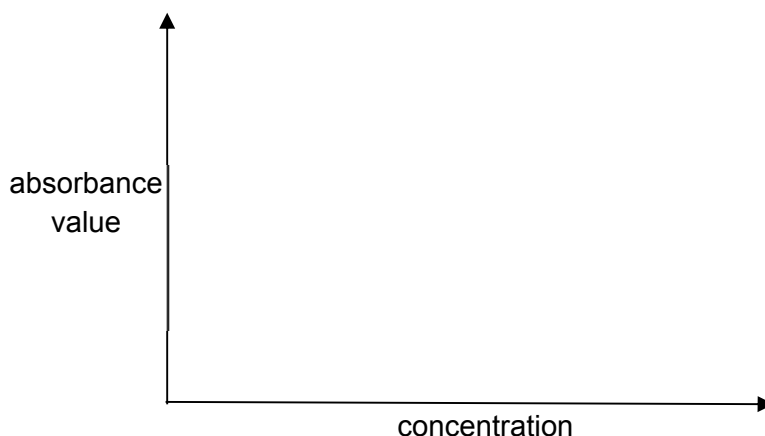

[1]

M48	
-----	--

- (ii) Using the information given above, you are required to write a plan to determine the concentration of WO_4^- in a solution of **Z**.

You may assume that you are provided with:

- solution **Z**, of unknown WO_4^- concentration less than 2 mol dm^{-3} ;
- a standard solution containing 5.00 mol dm^{-3} of WO_4^- ;
- access to a spectrometer and instructions for its use;
- graph paper;
- the apparatus and chemicals normally found in a school or college laboratory.

Your plan should include details of:

- the preparation of 100.0 cm^3 of 2.00 mol dm^{-3} aqueous WO_4^- ;
- the preparation of a suitable range of diluted solutions of accurate concentrations;
- an outline of how the results would be obtained;
- how the calibration line would be used to determine the concentration of WO_4^- in solution **Z**.

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

[Total: 21]

Qualitative Analysis Notes

[ppt. = precipitate]

(a) Reactions of aqueous cations

cation	reaction with	
	NaOH(aq)	NH₃(aq)
aluminium, Al ³⁺ (aq)	white ppt. soluble in excess	white ppt. insoluble in excess
ammonium, NH ₄ ⁺ (aq)	ammonia produced on heating	–
barium, Ba ²⁺ (aq)	no ppt. (if reagents are pure)	no ppt.
calcium, Ca ²⁺ (aq)	white. ppt. with high [Ca ²⁺ (aq)]	no ppt.
chromium(III), Cr ³⁺ (aq)	grey-green ppt. soluble in excess giving dark green solution	grey-green ppt. insoluble in excess
copper(II), Cu ²⁺ (aq)	pale blue ppt. insoluble in excess	blue ppt. soluble in excess giving dark blue solution
iron(II), Fe ²⁺ (aq)	green ppt. turning brown on contact with air insoluble in excess	green ppt. turning brown on contact with air insoluble in excess
iron(III), Fe ³⁺ (aq)	red-brown ppt. insoluble in excess	red-brown ppt. insoluble in excess
magnesium, Mg ²⁺ (aq)	white ppt. insoluble in excess	white ppt. insoluble in excess
manganese(II), Mn ²⁺ (aq)	off-white ppt. rapidly turning brown on contact with air insoluble in excess	off-white ppt. rapidly turning brown on contact with air insoluble in excess
zinc, Zn ²⁺ (aq)	white ppt. soluble in excess	white ppt. soluble in excess

(b) Reactions of anions

<i>ion</i>	<i>reaction</i>
carbonate, CO_3^{2-}	CO_2 liberated by dilute acids
chloride, $\text{Cl}^- (\text{aq})$	gives white ppt. with $\text{Ag}^+(\text{aq})$ (soluble in $\text{NH}_3(\text{aq})$)
bromide, $\text{Br}^- (\text{aq})$	gives pale cream ppt. with $\text{Ag}^+(\text{aq})$ (partially soluble in $\text{NH}_3(\text{aq})$)
iodide, $\text{I}^- (\text{aq})$	gives yellow ppt. with $\text{Ag}^+(\text{aq})$ (insoluble in $\text{NH}_3(\text{aq})$)
nitrate, $\text{NO}_3^- (\text{aq})$	NH_3 liberated on heating with $\text{OH}^-(\text{aq})$ and Al foil
nitrite, $\text{NO}_2^- (\text{aq})$	NH_3 liberated on heating with $\text{OH}^-(\text{aq})$ and Al foil; NO liberated by dilute acids (colourless $\text{NO} \rightarrow$ (pale) brown NO_2 in air)
sulfate, $\text{SO}_4^{2-} (\text{aq})$	gives white ppt. with $\text{Ba}^{2+}(\text{aq})$ (insoluble in excess dilute strong acids)
sulfite, $\text{SO}_3^{2-} (\text{aq})$	SO_2 liberated on warming with dilute acids; gives white ppt. with $\text{Ba}^{2+}(\text{aq})$ (soluble in dilute strong acids)

(c) Tests for gases

<i>gas</i>	<i>test and test result</i>
ammonia, NH_3	turns damp red litmus paper blue
carbon dioxide, CO_2	gives a white ppt. with limewater (ppt. dissolves with excess CO_2)
chlorine, Cl_2	bleaches damp litmus paper
hydrogen, H_2	"pops" with a lighted splint
oxygen, O_2	relights a glowing splint
sulfur dioxide, SO_2	turns aqueous acidified potassium manganate(VII) from purple to colourless

(d) Colour of halogens

<i>halogen</i>	<i>colour of element</i>	<i>colour in aqueous solution</i>	<i>colour in hexane</i>
chlorine, Cl_2	greenish yellow gas	pale yellow	pale yellow
bromine, Br_2	reddish brown gas / liquid	orange	orange-red
iodine, I_2	black solid / purple gas	brown	purple

[illegible]

